Condor Premier Technical Manual



This document is the copyright of Money Controls Ltd and may not be reproduced in part or in total by any means, electronic or otherwise, without the written permission of Money Controls Ltd. Money Controls Ltd does not accept liability for any errors or omissions contained within this document. Money Controls Ltd shall not incur any penalties arising out of the adherence to, interpretation of, or reliance on, this standard. Money Controls Ltd will provide full support for this product when used as described within this document. Use in applications not covered or outside the scope of this document may not be supported. Money Controls Ltd. reserves the right to amend, improve or change the product referred to within this document or the document itself at any time.

©Money Controls 2007. All rights reserved.

Contents

1. D	iary of Changes	. 4
2. In	Itroduction	. 5
2.1	Theory of operation	. 5
3. M	echanical Configurations	. 6
3.1	Coin Entry Slot Profile	. 8
4. C	oin Dimensions	10
5. B	uild Variations	11
6. C	onfiguration Code Details	12
7. C	ondor Premier Connectors	13
8. Pa	arallel Interface	14
8.1	VACS Signal	15
8.2	Credit Signals	16
8.	21 C213x & TRANSIT Credits	16
8.	22 C233x Credits	16
8.	23 C243x Credits	17
8.3	Inhibit All	18
8.4	Alarm (C2x3x only)	19
8.5	Error (TRANSIT only)	19
8.6	Diagnostics (power-up)	19
9. LI	ED Status	20
10.	Divertor Driver	21
10.1	Description	22
10.2	Operation	22
11.	Serial Interface - ccTalk	23
12.	Teach and Run [™]	24
12.1	Teach and Run [™] Method	25
13.	Coin Security – Window Adjustment	26
13.1	Coin Security – Rotary Switch	27
14.	ccTalk Serial Messages	28
14.1	ccTalk error codes	29
14.2	ccTalk fault codes	29
14.3	ccTalk status codes	29
15.	Service	30
16.	Electrical Interface	31
17.	Product Compliance	32
17.1	EMC Emissions	32
17.2	EMC Immunity	32
18.	Appendix 1 – Divertor	33
18.1	Divertor Spares	34
18.2	Divertor Application Example	35

Figures

Figure 1: Condor Premier External Dimensions	6
Figure 2: Direct and Reverse Accept Paths	7
Figure 3: Coin Entry Slot Profile	9
Figure 4: Connector Positions	13
Figure 5: Parallel Interface - Connector 1 (TRANSIT – and Connector 2)	14
Figure 6: C213x Credit Output Pulse	
Figure 7: C233x Credit Output Pulses	
Figure 8: C243x Credit Output Pulses	
Figure 9: Divertor Driver - Connector 2	
Figure 10: ccTalk Interface - Connector 3	
Figure 11: Teach and Run [™] Controls	
Figure 12: Coin Security – Rotary Switch	
Figure 13: Coin Path Access	
Figure 14: Divertor Dimensions	
Figure 15: Divertor Interface Example	

Tables

Table 1: Coin Dimensions	10
Table 2: Condor Premier Builds:	11
Table 3: Coins / Credits	12
Table 4: Parallel Interface Connector	12
Table 5: Inhibit Polarity	12
Table 6: Connector Descriptions	13
Table 7: VACS timers	15
Table 8: Coin Security Options	
Table 9: ccTalk Serial Commands	
Table 10: Error Codes	29
Table 11: Fault Codes	29
Table 12: Status Codes	29
Table 13: Power Requirements	31
Table 14: Current Consumption	31
Table 15: Environmental Ranges	31
Table 16: Divertor Spares	34

©Money Controls 2007. All rights reserved. Page 3 of 36

1. Diary of Changes

Issue 1.0			3 rd June 2005
	>	Based on Condor Premier Functional Specification Draft E.	
Issue 1.1			28 th Apr 2006
	\triangleright	Added section 3.1 Coin Entry Slot Profile.	
Issue 1.2			2 nd May 2006
	\triangleright	Corrected section 2.1 to reflect the Premiers sensors.	.,
	\triangleright	Corrected the page layout in section <u>18</u> .	
Issue 2.0			28 th July 2007
	\triangleright	Added section 12 Teach and RunTM.	-
Issue 2.1			24 th Sept 2007
	\triangleright	Added more builds to Table 2: Condor Premier Builds:	•
Issue 2.2	2		¹ April 2008
	\succ	Corrected the T&R method. <u>12 Teach and RunTM.</u>	·

©Money Controls 2007. All rights reserved. Page 4 of 36

2. Introduction

The Condor Premier range of electronic coin acceptors has been designed specifically for the international gaming machine industry, accepting up to 10 coins per second. Whilst conforming to the industry standard space envelope, Condor Premier brings advanced coin handling technology and sets a new standard in discrimination, reliability and servicing.

2.1 Theory of operation

When a coin enters the Condor Premier, the coins material – conductivity, and volume, affect the magnetic fields generated by the 2 inductive coils. Two magnetic fields are generated – one with the fields in-phase (Sensor 1), the second with the fields out-of-phase (Sensor 2). The coin / token has a different affect on each on both the amplitude and frequency.

Sensor 3 is a reflective sensor. An infra-red beam is emitted from the Condor Premier and a measurement of the beam reflected back is taken.

Sensor 4 is the sum of Sensor 1 – Sensor 2.

Sensors 1 to 4 are 8 bit sensors.

Sensor 5 is a diameter sensor consisting of three linear optical devices, A, B and C, whose beams travel horizontally across the coin path. As the coin / token breaks the beams in turn, the time taken is measured and the diameter can be calculated.

Sensors 6 & 7 are Frequency Modulation sensors (FM Max/Min). Sensor 1 and Sensor 2 measure the change in amplitude, Sensors 6 & 7 measure the change in frequency on Sensor 1 caused by the coin / token.

Sensors 8 & 9 are Frequency Modulation sensors (FM Max/Min). Sensor 1 and Sensor 2 measure the change in amplitude, Sensors 8 & 9 measure the change in frequency on Sensor 2 caused by the coin / token.

Sensor 10 is a combination / virtual sensor whose output is a linear equation based on Sensors 1 to 9. The detail is determined during the coin specification and is fixed for a nominated currency.

Sensors 5 to 10 are 16 bit sensors.

When a Condor Premier is pre-programmed by Money Controls values from true coin readings are stored in memory. When a coin is entered the readings generated are compared to those windows programmed into EPROM. If a match is **NOT** found on **ALL** the programmed sensors then the coin will be rejected.

If the readings from the coin entered fall within **ALL** those programmed in memory, then a VACS (see section 8.1) signal will be generated. Shortly afterwards the accept gate will be activated, the coin will pass the credit opto's and a credit pulse (see section 8.2) will be issued.

The accept gate will stay open for a short time after the coin passes the credit opto's. If another **true** coin, is closely following the 1st coin, then the accept gate will remain OPEN. If the following coin is deemed **false**, then the accept gate will close immediately a window is not matched and the coin will be rejected.

©Money Controls 2007. All rights reserved. Page 5 of 36

3. Mechanical Configurations

Figure 1: Condor Premier External Dimensions





All Reverse action builds use Divertor "B".

©Money Controls 2007. All rights reserved. Page 6 of 36





©Money Controls 2007. All rights reserved. Page 7 of 36

3.1 Coin Entry Slot Profile

Money Controls provide a recommended coin entry specification for using the Condor Premier. Figure 3 below shows the recommended coin entry specification. Conforming to this specification will ensure optimum performance of the Condor Premier, resulting in excellent true coin acceptance at an equivalent rate of up to 10 true coins per second and the optimum fraud rejection.

In addition to Figure 3. The specification consists of the following points.

- There must be a minimum gap of 40ms between the trailing edge of the first coin and the leading edge of the second coin.
- The fall of the coin through the Condor Premier should be unrestricted (i.e. not obstructed by dirt/debris).
- The coins should be entered at a consistent velocity. Meaning that the coins should not "catch each other up" and the minimum gap of 40ms should be maintained.
- The Condor Premier is not mounted more than 2 degrees from vertical in any plane.

Maintaining the above will achieve optimum performance. Deviating from the above may have a detrimental effect.

If you require technical advice on designing the coin entry/mounting for Condor Premier please contact your local Money Controls office for assistance.

TSP126

Figure 3: Coin Entry Slot Profile

TABLE 1

GATE FITTED	GATE MOULDING (PBL REF)	A coin entry profile (max slot length)	C REFERENCE LINE DIMENSION (mm)
NARROW	PBL/973	26.00mm MAX	19.30
STANDARD	PBL/930	33.50mm MAX	23.05
WIDE	PBL/1245	40.00mm MAX	26.30
EXTRA WIDE	PBL/500	47.00mm MAX	29.80

TABLE 2

SPACERS FITTED	SPACER MOULDING (PBL REF)	B coin entry profile (max slot width)	D REFERENCE LINE DIMENSION (mm)
GREY	PBL/512	4.00mm MAX	4.20
BLUE	PBL/1153	3.50mm MAX	4.45
BLACK	PBL/511	3.00mm MAX	4.70
RED *	PBL/580	2.20mm MAX	5.10
NONE	-	2.50mm MAX	4.95

* Machined gate

Guidance notes for determining the optimum coin slot entry dimensions.

DIMENSION A: The length of the coin entry slot should be a minimum of 2.00mm longer than the largest coin diameter in the users coinset upto the maximum allowable dimension given in TABLE 1 for the type of gate fitted.

DIMENSION B: The width of the coin entry slot should be a minimum of 0.30mm wider than the thickest coin in the users coinset up to the maximum allowable dimension given in TABLE 2 for the type of spacers fitted.

Example:

For a coinset with maximum coin diameter of 26.51mm and thickness of 2.11mm, the optimum slot length is between 28.51mm and 33.50mm (STANDARD gate fitted) and the optimum slot width is between 2.41mm and 2.50mm (NO spacers fitted).

The centre line for this slot profile would be a point 23.05mm and 4.95mm from the top LHS mounting stud DATUM and which runs perpendicular to the coin mech orientation.

Notes:

All dimensions are referenced from the LHS mounting stud DATUM point.

The coin validator and entry slot profile $\ensuremath{\mathsf{MUST}}$ be vertical for optimum performance.



(c) DISTANCE BETWEEN DATUM AND TOP OF CONDOR BODY

4. Coin Dimensions

Accepted range of coin sizes are shown below:

Table 1: Coin Dimensions

Diameter	15mm to 44.5mm (0.59" to 1.75")		
Thickness	1.5mm to 3.75mm (0.059" to 0.148").		

Condor Premier is designed to accept coins within the diameter range 15mm to 44.5mm and thickness range 1.5mm to 3.75mm.

For coins larger than 38.5mm sections of the divertor assembly are removed.

For coins thicker than 2.85mm a selection of spacers are available. The spacers open the debris flap wider than standard. However, when a Condor Premier is built to accept larger coins / tokens, its performance in discriminating smaller coins may be reduced due to the increased space, allowing the coins to rattle or bounce through the acceptor.

Table 2 lists the available builds:

©Money Controls 2007. All rights reserved. Page 10 of 36

5. Build Variations

Table 2: Condor Premier Builds:

CONDOR PREMIER	Gate Size	Spacer	Deflector	Accept Path	Divider Plate Profile	Notes
AA	33mm	3mm	YES	DIRECT	"A"	
AB	40mm	3mm	NO	DIRECT	"A"	
AC	45mm	3mm	NO	DIRECT	"A"	
AD	33mm	4mm	YES	DIRECT	"A"	
AE	40mm	4mm	NO	DIRECT	"A"	
AF	45mm	4mm	NO	DIRECT	"A"	
AG	33mm	3mm	YES	REVERSE	"B"	
AH	40mm	3mm	NO	REVERSE	"B"	
AI	45mm	3mm	NO	REVERSE	"B"	
AJ	33mm	4mm	YES	REVERSE	"B"	
AK	40mm	4mm	NO	REVERSE	"B"	
AL	45mm	4mm	NO	REVERSE	"B"	
AM	25mm	3mm	YES	DIRECT	"A"	
AQ	25mm	3.5mm	YES	DIRECT	"A"	
AR	33mm	3.5mm	YES	DIRECT	"A"	
AS	40mm	3.5mm	NO	DIRECT	"B"	
AU	33mm	3.5mm	YES	REVERSE	"B"	
AV	40mm	3.5mm	NO	REVERSE	"B"	
AW	45mm	3.5mm	NO	REVERSE	"B"	
AX	45mm	3mm	NO	REVERSE	"B"	
AY	45mm	3mm	NO	DIRECT	"A"	
AZ	33mm	3mm	YES	DIRECT	"A"	PMC/762
BA	33mm	3mm	YES	DIRECT	"A"	Euro Coils
BR	33mm	3.5mm	YES	DIRECT	"A"	Euro Coils
JA	33mm	2mm	YES	DIRECT	"A"	
КА	33mm	2mm	YES	DIRECT	"A"	

©Money Controls 2007. All rights reserved. Page 11 of 36

6. Configuration Code Details



Table 3: Coins / Credits

Model				Description	
C2	1	Х	Х	Single / multi [*] coin – single credit pulse.	
C2	3	Х	Х	Multi coin - Fixed credit pulses.	
C2	4	Х	Х	Multi coin - Customer specific credit pulses.	

^{*} Can be used for Old/New coinage or for multiple windows of the same coin to increase security, i.e. multiple small windows as opposed to 1 large window.

Table 4: Parallel Interface Connector

Model				Connector type	Part No.	Description
C2	X	3	Х	AMP	640456-7	7 Way - pin 5 removed

Table 5: Inhibit Polarity

	Model				Inhibit line status (High > 4V, Low < 1V)	Inhibit line not connected
С	2	Х	Х	0	HIGH = COIN INHIBITED	COIN INHIBITED
С	2	Х	Х	1	HIGH = COIN INHIBITED	COIN ACCEPTED
С	2	Х	Х	2	LOW = COIN INHIBITED	COIN INHIBITED
С	2	Х	Х	3	LOW = COIN INHIBITED	COIN ACCEPTED

©Money Controls 2007. All rights reserved. Page 12 of 36

7. Condor Premier Connectors

Figure 4: Connector Positions



Table 6: Connector Descriptions

Condor Premier

Conn1	Parallel Interface	See Figure 5
Conn2	Divertor Driver	See <u>Figure 9</u>
Conn3	ccTalk Interface	See Figure 10

Condor Premier (Transit)

Conn1	Parallel Interface (6w JST)	See Figure 5
Conn2	Parallel Interface (4w JST)	See Figure 5
Conn3	ccTalk Interface	See Figure 10

©Money Controls 2007. All rights reserved. Page 13 of 36

8. Parallel Interface

Figure 5: Parallel Interface - Connector 1 (TRANSIT – and Connector 2)

Condor Premier



Condor Premier (TRANSIT)

CONN1



Pin 1	Inhibit All	High/Low [@]
Pin 2	VACS	17ms
Pin 3	+12V dc	
Pin 4	+24V dc	
Pin 5	+32V dc	
Pin 6	GND	

CONN2

Connector Type:- JST Part No:- B4B-XH-A



©Money Controls 2007. All rights reserved. Page 14 of 36

8.1 VACS Signal

VACS is an acronym for **V**alid **A**dvanced **C**redit **S**ignal.

A VACS signal is generated when the readings from the entered coin fall within ALL programmed memory limits for a particular given coin.

The VACS signal is generated at the same time that the accept gate is opened.

On model C2x3x the VACS can be used to confirm the Credit signal is true. i.e. a VACS signal issued before a Credit signal = valid coin condition. Any other condition = invalid.

The length and polarity of the VACS signal is given in Table 7.

See Figure 5 for the pin-out of the parallel connector.

Table 7: VACS timers.

Model	Output Polarity	Standard	Reverse
C2x3x	Open Collector (low)	17ms	35ms

8.2 Credit Signals

Shortly after the accept gate has been activated, the coin passes the credit opto sensor and a credit pulse is issued.

The accept gate will stay open for a short time after the coin passes the credit opto's. If another **true** coin, is closely following the 1st coin, then the accept gate will remain OPEN.

If the following coin is deemed **false**, then the accept gate will close immediately and the coin will be rejected.

The Credit output consists of an open collector NPN transistor. On acceptance of a true coin the transistor is turned on for a period of t ms (+/- 10%) to less than 0.7 volts at a Max. 50mA. The host machine must look for valid credit pulse of NOT LESS THAN t – 50%. It is not sufficient to merely detect the edges of a credit pulse. This 'de-bounce' will prevent credits being registered by the host machine as a result of any noise or false credit pulses being induced on the output lines.

8.21 C213X & TRANSIT CREDITS

<u>t = 12ms, minimum time between output credits = 80ms.</u>

Figure 6: C213x Credit Output Pulse



8.22 C233X CREDITS

<u>t = 12ms, u = 20ms, w = 80ms (4 x 20ms).</u>

Number of pulses are FIXED.

Figure 7: C233x Credit Output Pulses



Page 16 of 36

8.23 C243X CREDITS

x, y = CUSTOMER SELECTABLE.

Minimum time between output credits = $4 \times \text{gap}$ timer (y) = $4 \times 20 \text{ms}$ = 80ms.

Number of pulses are CUSTOMER SELECTABLE.

Figure 8: C243x Credit Output Pulses



Credit pulse (x), selectable between 1ms and 250ms in 1ms steps. Gap timer (y), selectable between 10ms and 60ms in 10ms steps.

Credits are stacked in a buffer. Care should be taken in specifying the number of pulses per coin, the length of credit pulse and the gap timer, especially in fast feed applications due to the time required to actually send the pulses to the host machine.

e.g. 10 pulses x 100ms (credit timer (x)) + 9 x 50ms (gap timer (y)) + 4 x 50ms (y) (minimum time between credits) = 1,650ms (1.65secs).

©Money Controls 2007. All rights reserved. Page 17 of 36

8.3 Inhibit All

Inhibits the acceptance of all the coins programmed.

4 options are available.

0	Inhibit High	Default Inhibit
1	Inhibit High	Default Accept
2	Inhibit Low	Default Inhibit
3	Inhibit Low	Default Accept

Inhibit High requires an active drive >4V Inhibit Low requires an active drive <0.5V

The Default condition determines whether a coin accepts or rejects if the Inhibit All pin is not connected.

<u>Note: In some applications, although the Inhibit is driven High/Low, it is not necessarily driven</u> <u>High/Low to enable the coins, i.e. it is left floating.</u> <u>In this instance a model which is 'Default Accept' should be used.</u>

8.4 Alarm (C2x3x only)

The alarm signal is activated if any one of the following three conditions occurs:

- 1 A coin or coins are seen to travel in the wrong direction
- 2 The credit opto's are obscured
- 3 An event occurs out of sequence.

Once the alarm condition has been activated, the following will occur:

- 1 The status LED changes from continuous green to continuous yellow.
- 2 All coins are inhibited
- 3 A single 12ms pulse is output on the Alarm o/p unless the credit opto's are blocked, in which case the output is active for the duration of the blockage. Once the blockage is removed, the Alarm output will be reset.

8.5 Error (TRANSIT only)

The error signal is an open collector output switching to 0V which is activated if any one of the following two conditions occurs:

- 1 A coin or blockage is present in the reject sensor area i.e every time a coin is rejected or any object blocks the reject sensor beams.
- 2 When there is a coin or blockage in the credit sensor area and the gate is **not** being driven.

The Error output remains active for as long as the coin / blockage is present.

8.6 Diagnostics (power-up)

Diagnostics is a customer option which can be enabled or disabled according to customer requirements.

The diagnostics routines performed at power-up cover the following areas:-

- Inductive coils
- Reflective sensor
- Diameter opto's
- Credit opto

If no faults are found, the coin acceptor will be ready to accept coins within 60ms of power-up.

If a fault is found the following will occur:

- 1 The status LED will flash red
- 2 No coins will be accepted
- 3 On Models C2x3x the Alarm pin will activate as per normal alarm conditions

©Money Controls 2007. All rights reserved. Page 19 of 36

9. LED Status

Continuous GREEN

Normal operation (no faults). Coin / token will accept

The status LED must NOT turn RED during normal operation. If Power-up Diagnostics eeprom setting is OFF, any faults present will not be indicated

Flashing RED

Critical fault detected at power-up. Coin / token NOT accepted

Regardless of the Power-up Diagnostics setting, the following fault is indicated:

• EEPROM checksum error.

When Power-up Diagnostics is set to ON the following additional faults are indicated:

- Fault on inductive coils.
- Fault on reflective sensor.
- Fault on diameter opto's.
- Fault on credit sensor.
- Fault on reject sensor.

Continuous YELLOW

When Condor Premier powers-up, the status LED turns yellow while the mech is calibrating the discrimination sensors. This is normally very fast, but if the mech is unable to calibrate the sensors then the LED will stay continuous YELLOW. Condor Premier will not accept any coins / tokens.

Alarm condition active

The following are not valid LED status indications:

- Continuous RED
- Flashing GREEN
- Flashing YELLOW

©Money Controls 2007. All rights reserved. Page 20 of 36

TSP126

10. Divertor Driver

Condor Premier

Figure 9: Divertor Driver - Connector 2



C2xxx Connector type:-AMP Part No:- 640456-4



Pin 1	+V	12V
Pin 2	Divert 1#	500 ms
Pin 3	0V	Gnd
Pin 4	Divert 2#	500 ms
"Signals	to Host Machine	/ Interface Board.
Both sig	nais are identica	I.

©Money Controls 2007. All rights reserved. Page 21 of 36

10.1 Description

There is an option to drive an active 2-way divertor, which fits below the Condor Premier acceptor. The function of the active divertor is to direct coins down one of two paths according to the 'divert' details held within acceptor EEPROM for each programmed coin. It may, for example direct a single coin type to a hopper for payout purposes and direct all other coins/tokens to a cashbox.

The sorter module contains a PCB that interfaces with Condor Premier and the host machine.

10.2 Operation

Condor Premier send a logic signal to the divertor, generated co-incidentally with the VACS signals. The divertor signal is dependent on both the coin 'divert' information stored in EEPROM and the timing gap between inserted coins.

As the typical coin throughput on Condor Premier can exceed 10 coins per second, it is not possible to actively divert coins at this level of throughput.

The divertor drive signal operates according to the following:-

- a) Where the timing gap between any two adjacent coins in a stream of coins is greater than 300ms, each coin is diverted according to its programmed 'divert' path. Adjacent coins can have identical or different 'divert' paths.
- b) Where the timing gap between any two adjacent coins in a stream of coins is less than 300ms, the operation depends upon the coin's divert paths.
 - i. Where the coin divert paths are the <u>same</u>, all will accept and divert according to their divert path.
 - ii. Where the coin divert paths are <u>different</u>, the first will accept and be diverted according to its divert path. The second coin will reject. Coin acceptance is inhibited until the Condor Premier detects a timing gap between coins sufficient to resume normal operation. This is coin size dependent, but typically 0.5 seconds.

11. Serial Interface - ccTalk

Protocol: **ccTalk** compliant implementation.

Figure 10: ccTalk Interface - Connector 3





©Money Controls 2007. All rights reserved. Page 23 of 36

12. Teach and Run[™].

Condor Premier is equipped with the same unique programming system as Condor / Plus - **Teach and RunTM**. **Teach and RunTM** is a method of programming the acceptor to accept a coin / token by inserting a sample of a given coin / token, generally 8 to 10 coins, to allow it to calibrate itself. The procedure itself is very simple and involves using the rotary switch and the programming button both located on the rear of the acceptor (see Figure 11).

The increase in coin insertions over Condor, is because a new algorithm has been developed for Condor Premier, which aims to improve the accuracy of the taught coin / token window by eliminating spurious coin readings.

<u>NOTE:-</u> <u>To make use of the Teach and Run[™] function, MechTool[™], 'Teach Permitted' AND</u> <u>Teach and Run[™] MUST be selected, i.e. ON, when ordering.</u> <u>Condor Premier also allows Teach and Run[™] (if selected when ordered) to be enabled and</u> <u>disabled via the MechTool[™] feature. (Refer to the Condor Premier MechTool[™] Manual for</u> <u>further details)</u>

(The rotary switch has no functional effect in C2xxxA applications).

Figure 11: **Teach and Run[™]** Controls



TIP: If after entering 20 coins **Teach and Run[™]** doesn't work, this means the coin/token readings are too far apart to program successfully. Start again using 1 of the coin/token sample and repeat **Teach and Run[™]**. Put the Condor Premier into run mode and check how many of the sample coins/tokens accept.

Using one of the coins that reject, program the next window in the same way as the first. Repeat until all coins/tokens accept.

If the coin/token programs successfully but then doesn't accept, you may have to enable more windows. This is explained in the Condor Premier **MechTool**TM manual.

©Money Controls 2007. All rights reserved. Page 24 of 36

12.1 Teach and Run[™] Method

Set the Rotary Switch to the desired window position to be programmed (e.g.1).

If only 1 coin has been enabled then you can only program window 1. If 6 coins have been enabled then you program windows 1 to 6. If 12 coins have been enabled then you program windows 1 to C. Credit codes CANNOT be changed. Please refer to the Condor Premier **Mechtool[™]** Manual for further details.

Press the Program Button for 2 seconds.

The LED will turn RED while the button is pressed. If the LED returns to Green, **Teach and Run[™]** has not been enabled. Refer to the Condor Premier **MechTool[™]** Manual for further details.

Enter the required numbers of coins / tokens (typically 8).

The LED will flash Green while coins are being entered.

After the required number of coins have been entered and programming has been successful.

The LED will be continuous Green

Turn the Rotary Switch back to 0.

Coins will now accept.

Select the level of security required. (see section $\underline{13}$)

©Money Controls 2007. All rights reserved. Page 25 of 36





(2 secs)

13. Coin Security – Window Adjustment

Condor Premier offers different levels of security depending on the customer's requirements (see Table 8 below).

All security options must be selected at the time of ordering.

Figure 12 shows the operation of the rotary switch. The operation of the switch will be dependent on the tuning options selected below.

(The rotary switch has no functional effect in C2xxxA applications).

Window Tuning ¹	Secure Tuning ²	Individual Tuning ³	Coin Security Level
OFF	OFF	OFF	No coin window modification is possible.
OFF	OFF	ON	Individual window tweaks possible. All windows can be widened or narrowed.
OFF	ON	OFF	No coin window modification is possible.
OFF	ON	ON	Individual window tweaks possible, but tweaks can only narrow programmed windows.
ON	OFF	OFF	<i>Standard tuning</i> ¹ on all windows which can be widened or narrowed.
ON	OFF	ON	Both <i>Standard Tuning</i> ¹ and individual window tweaks are possible on all windows which can be widened or narrowed. Their cumulative ⁴ effect on the window is used.
ON	ON	OFF	<i>Standard Tuning</i> ¹ performed on ALL windows, but only to narrow programmed windows.
ON	ON	ON	Both <i>Standard Tuning</i> ¹ and individual window tweaks are possible on all windows which can be narrowed only. Their cumulative ⁴ effect on the window is used.

Table 8: Coin Security Options

13.1 Coin Security – Rotary Switch

Figure 12: Coin Security – Rotary Switch



Each count is added/subtracted to/from the upper and lower limits of the programmed windows, therefore, each count represents an **<u>actual</u>** increase/reduction of 2 counts.

¹ <u>Window Tuning (*Standard Tuning*</u>), when enabled, allows window tweaks during 'normal' operation of the Condor Premier.

 2 <u>Secure Tuning</u>, when enabled, only allows windows to be narrowed – NOT widened.

Note: Enabling Secure Tuning will IGNORE previously programmed window WIDENING values.

³ <u>Individual Tuning</u>, when enabled, allows individual window tweaks to be programmed into eeprom.

<u>Note: Disabling Individual Tuning will IGNORE previously programmed Individual Tuning</u> values.

⁴ <u>Cumulative effect</u>. Any *Standard Tuning* tweaks are added to tweaks programmed in EPROM. e.g. Individual tweak = 2 (-2 counts), standard tuning tweak = D (+3 counts), total effect on the programmed window = +1 count top and bottom of each sensor window.

14. ccTalk Serial Messages

Table 9: ccTalk Serial Commands

Header	Function	Header	Function
255	Factory set-up and test	226	Request insertion counter
254	Simple poll	225	Request accept counter
253	Address poll	216	Request data storage availability
252	Address clash	213	Request option flags
251	Address change	212	Request coin position
250	Address random	210	Modify sorter paths
249	Request polling priority	209	Request sorter paths
248	Request status	202	Teach mode control
247	Request variable set	201	Request teach status
246	Request manufacturer id	197	Calculate ROM checksum
245	Request equipment category id	196	Request creation date
244	Request product code	195	Request last modification date
242	Request serial number	194	Request reject counter
241	Request software revision	193	Request fraud counter
240	Test solenoids	192	Request build code
238	Test output lines	185	Modify coin id
237	Read input lines	184	Request coin id
236	Read opto states	183	Upload window data
233	Latch output lines		
232	Perform self-test	4	Request comms revision
231	Modify inhibit status	3	Clear comms status variables
230	Request inhibit status	2	Request comms status variables
229	Read buffered credit or error codes	1	Reset device

©Money Controls 2007. All rights reserved. Page 28 of 36

14.1 ccTalk error codes.

Table 10: Error Codes

Code	Error	Code	Error
0	Null Event (no error)	14	Credit opto blocked
1	Reject coin	17	Coin going backwards
2	Inhibited coin	19	Coin too slow (over credit sensor)
3	Multiple window (ambiguous coin type)	24	Reject coin (repeated sequential trip)
5	Discrimination timeout	25	Reject slug
6	Accept sensor timeout	26	Reject opto's blocked
10	Credit sensor not ready	128	Inhibit coin (Type 1)
11	Divertor not ready		Inhibit coin (Type n)
12	Reject coin not cleared	139	Inhibit coin (Type 12)
13	Discrimination sensors not ready		

14.2 ccTalk fault codes.

Table 11: Fault Codes

Code	Fault	Code	Fault
0	OK (no fault detected)	4	Fault on piezo sensor
1	EEPROM checksum corrupted	5	Fault on reflective sensor
2	Fault on inductive coils	6	Fault on diameter sensor
3	Fault on credit sensor	18	Fault on reject sensor

14.3 ccTalk status codes.

Table 12: Status Codes

Code	Status
0	ОК
1	Coin return mechanism activated (flight deck open)
2	C.O.S. mechanism activated (coin-on-string)

©Money Controls 2007. All rights reserved. Page 29 of 36

15. Service

The following service advice is given:

- The coin path area should be cleaned regularly, every 100,000 coins or 3 months, whichever is the sooner, to ensure accurate acceptance of coins and tokens.
- Only a damp cloth should be used.
- Under NO circumstances should any solvent or foam type cleaner be used.
- Access to the coin path is gained by opening the Debris Flap (see below).

Figure 13: Coin Path Access



©Money Controls 2007. All rights reserved. Page 30 of 36

16. Electrical Interface

Table 13: Power Requirements

Voltage:	12V – 24Vdc (TRANSIT: 12 – 32Vdc)
Absolute:	Min 11V Max 32V
Min / Max riso timo:	5ms / 500ms
will / wax lise time.	(From 0V to within supply range)
Min / Max fall time:	5ms / 500ms
	(From within supply range to 0V)
Acceptor Power up time:	60ms from the application of a valid voltage supply. A valid supply must be between the limits specified above.
Ripple voltage [< 120Hz]:	< 1 Volt
Ripple voltage [> 120Hz]:	< 100mV
Ripple voltage [> 1KHz]:	< 20mV

Table 14: Current Consumption

Typically:	50mA
Maximum:	500mA

Table 15: Environmental Ranges

Operating temperature range:	0°C to 60°C	
	10% to 75% RH non-condensing	
Storago tomporaturo rango:	-25°C to 70°C	
Storage temperature range.	5% to 95% RH non-condensing	
(Recovery time by the acceptor after a temperature step change is 20°C per hour. Maximum operating rate of change is 20°C per hour.)		

17. Product Compliance

17.1 EMC Emissions

The product complies with:

EN55022: 1995 – Radiated Emissions Class B.

EN55022: 1995 – Conducted Emissions Class A.

17.2 EMC Immunity

The product complies with:

EN50082-1: 1992 - Immunity.

©Money Controls 2007. All rights reserved. Page 32 of 36

18. Appendix 1 – Divertor

Figure 14: Divertor Dimensions

TOP ENTRY OF CONDOR









DIRECT Coin Path Coin Path SOLENOID ASSEMBLY

SHOWN ACTIVATED



©Money Controls 2007. All rights reserved. Page 33 of 36

18.1 Divertor Spares

Table 16: Divertor Spares

Item	Description	Part Number
1	PCB	SCNDORXX00060
2	Main Bracket	SCNDORXX00107
3	Divertor Flap Bracket	SCNDORXX00099
4	Coin Guide	SCNDORXX00092
5	Direct Solenoid (complete)	SCNDORXX00090
5	Reverse Solenoid (complete)	SCNDORXX00091
6	Divertor Flap	SCNDORXX00095
7	Pivot Link	SCNDORXX00093
8	Spacer Bush	SCNDORXX00096
9	M4 Full Nut	SCNDORXX00100
10	M4 Shakeproof Washer	SCNDORXX00101
11	Mounting Bracket Clip	SCNDORXX00097
12	Self Tapping c/sunk Screw	SCNDORXX00106
13	M3 x 5 Pozi Pan M/C Screw	SCNDORXX00102
14	M3 Internal Shakeproof Washer	SCNDORXX00103
15	M3 x 10 Pozi Pan M/C Screw	SCNDORXX00104





18.2 Divertor Application Example

Figure 15: Divertor Interface Example



©Money Controls 2007. All rights reserved. Page 35 of 36 This manual is intended only to assist the reader in the use of this product and therefore Money Controls shall not be liable for any loss or damage whatsoever arising form the use of any information or particulars in, or any incorrect use of the product. Money Controls reserve the right to change product specifications on any item without prior notice.

©Money Controls 2007. All rights reserved. Page 36 of 36